

Converta-Cradle® Swing


Non-Stop

by GRACO®

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,
Please fill in the
model and serial
numbers above
from the label
beneath the
motor of your
new swing.

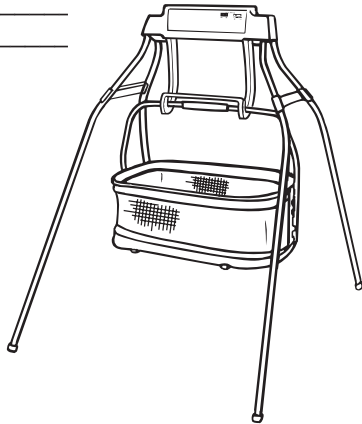

Model No. 1501 Series

Congratulations on your purchase of a Graco® swing!

Graco is the recognized leader in the design and manufacture of quality baby swings. We believe your new Graco® swing is a wise choice, promising many hours of enjoyment for your baby.

Before using your swing, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you use your swing properly.


**Please save your Owner's Manual
for future use.**

Customer Satisfaction


Our goal is to make every product the best it can be! If, however, you have a problem, please contact our **Customer Service Department at 1-800-345-4109** between 8:00 a.m. and 10:00 p.m. Eastern time weekdays. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

! WARNING


Failure to follow these warning instructions could result in serious injury or death.

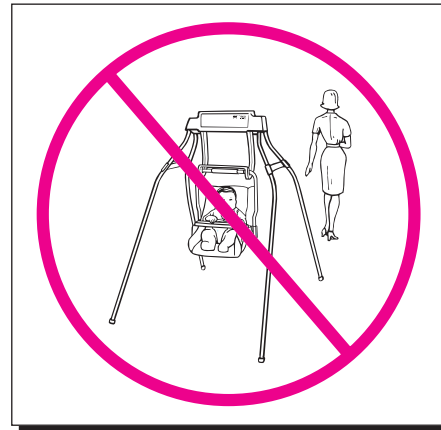

NEVER LEAVE YOUR CHILD UNATTENDED. Always keep your child in view.

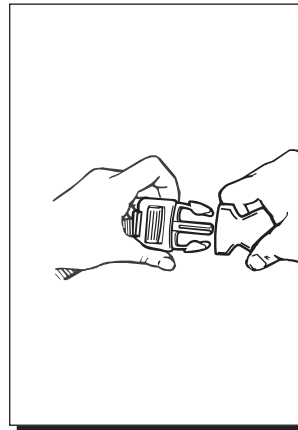

Avoid serious injury. Always use the waist belt when child is in infant carrier.

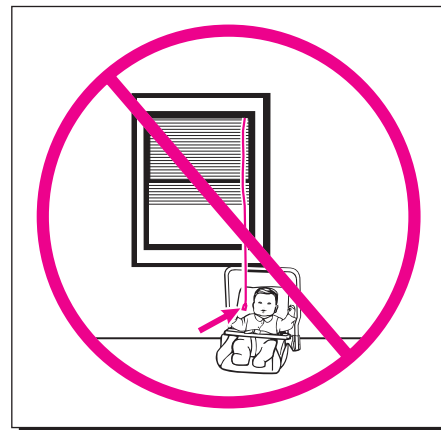

STRANGULATION HAZARD:
DO NOT place cradle or infant carrier in any location where there are cords, such as window blind cords, phone cords, etc.



DO NOT use INFANT CARRIER if child weighs over 25 pounds (11.3 kg). Maximum weight for infant carrier is 13 pounds (5.9 kg).



DO NOT place infant carrier near edge of a table or counter. Infant movement or rocking may cause it to move.

FOLLOW ASSEMBLY INSTRUCTIONS. If you have difficulties, please contact Customer Service.

DO NOT USE CRADLE SEAT.

DO NOT USE INFANT CARRIER.

DO NOT USE INFANT CARRIER.

DO NOT ADJUST HANGERS.


DISCONTINUE USING if child becomes too active.

DISCONTINUE USING if product becomes damaged or broken.

THIS PRODUCT IS NOT

WARNING:

Read all warnings and the assembly instructions. Failure to follow instructions can result in serious injury or death.

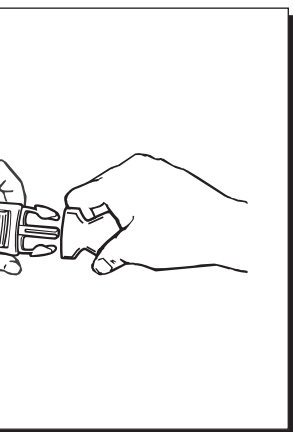

Prevent serious injury. Always use the correct technique when child is in the carrier.



DO NOT use the infant carrier as a car seat. This infant carrier is not designed for use in a vehicle.



Do not use the INFANT CARRIER if the child weighs over 25 pounds (11.3 kg). The maximum weight for CRADLE is 35 pounds (15.9 kg).



Strings can cause strangulation! DO NOT place items with a string around your child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over cradle or infant carrier or attach strings to toys.

Read ASSEMBLY INSTRUCTIONS CAREFULLY. If you experience any difficulty, please contact the Customer Service Department.

Do not use CRADLE as a night-time bed or car bed.

Do not use INFANT CARRIER without the seat cover.

Do not use INFANT CARRIER in a shopping cart.

Do not shake or JIGGLE while infant carrier is on swing.

Do not use CRADLE OR INFANT CARRIER when child is too active.


Do not use CRADLE OR INFANT CARRIER if it is damaged or broken.

Product is NOT INTENDED FOR COMMERCIAL USE.

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your swing. If any parts are missing, call Customer Service at 1-800-345-4109.


Tools required: Screwdriver and wrench (wrench included)

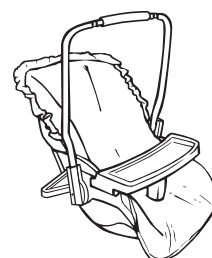

Infant carrier




Cradle

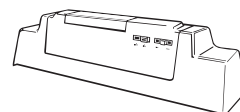

Motor unit




Plastic leg brace (2)

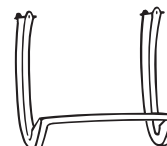

Hanger



 Screw (2)



Wrench



Acorn nut (2)



Leg tip (4)



Upper leg section (4)



Lower leg section (4)

CARE AND MAINTENANCE

FROM TIME TO TIME CHECK YOUR SWING for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.


REMOVABLE CLOTH SEAT COVER may be machine washed in lukewarm water on delicate cycle and drip-dried. NO BLEACH.

TO CLEAN SWING FRAME, use only household soap or detergent and warm water. NO BLEACH.

Attaching the Legs


Step 1.

Push **oval** end of the upper leg sections firmly onto the four plastic pegs. Hold tube vertically while pushing in. **Push leg on completely.**

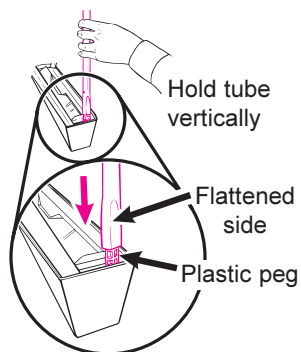


Step 2.

Push the leg tips on the round ends of the lower leg sections. (The other ends have a wire.)

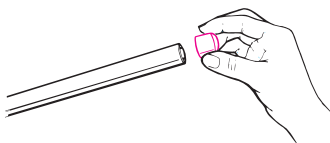

Step 3.


Put the wire end of lower leg sections into the **round** end of the upper leg sections. Push the sections together while twisting lower leg slightly. This will ensure a snug fit.

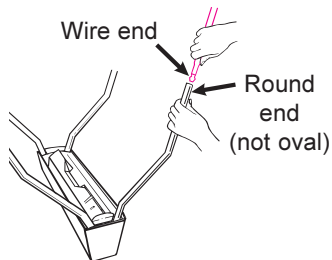

Step 4.


CHECK:

Lift swing as shown. If legs are assembled properly, the legs will dangle from the motor unit and not fall off.

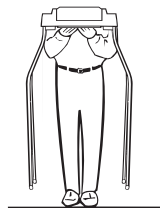

IF LEG FALLS:


Holding leg vertically, push leg firmly up while pushing the motor unit down.

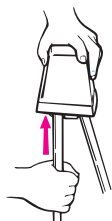

Step 5.

Open the swing legs completely. Snap plastic leg braces onto outside of legs. The plastic pins inside the ends of the braces will fit into the dimples on the legs.

Pull on the leg brace tab to take off.

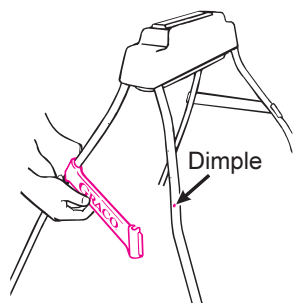


⚠ WARNING: Do not use swing without the leg braces.

Attaching the Hanger


Step 1.

With crossbar of hanger toward front of the motor unit, line up holes in hanger brackets with holes on the sides of motor unit.

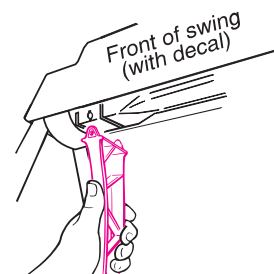

Step 2.

Insert screws into both brackets as shown. Fasten with acorn nuts using the enclosed hex wrench. Tighten nuts firmly with hex wrench and screwdriver.

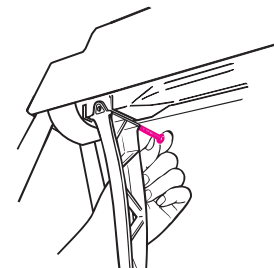


Installing Batteries

⚠ WARNING: NEVER INSERT OR REMOVE BATTERIES WITH BABY IN THE SEAT. THEY COULD FALL ON BABY IF DROPPED!

Step 1.


With baby out of swing, open the battery compartment by gently pressing on the lid at the ridged area and lifting the lid.

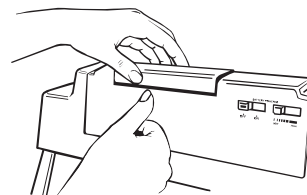

Step 2.


Insert two "D" cells. Alkaline or Ni-Cad "D" cells are best.

Be sure the batteries are put in correctly. (Swing will not run if batteries are put in backwards.)

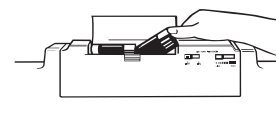

Step 3.

Snap the lid closed.

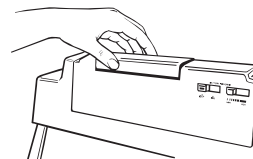

Using the Cradle

⚠ WARNING: Not intended for use as a night-time bed or car bed.

REMOVE LAW TAGS FROM THE CRADLE PAD BEFORE USING THIS CRADLE.


Step 1.

Lift top frame of cradle, and turn handle so that it lines up with the plastic hinges.




Step 2.

Snap handle and hinges together to lock. **Be sure handle is locked into the plastic hinges.**

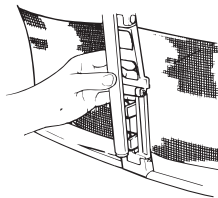

Step 3.

Place cradle in hanger. **Be sure handle notches are seated in the hanger.**

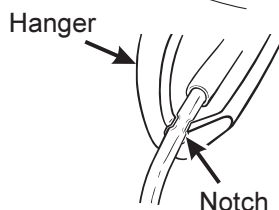


Starting the Cradle

Step 1.

Place your child in the cradle.


Step 2.

Set the CONTROL switch between the low and center positions. Your cradle will swing properly only in the lower range.

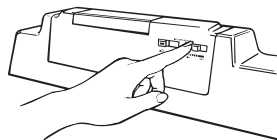

Step 3.

Push ON/OFF switch to the "on" position.

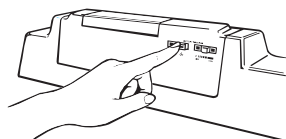

Step 4.


PUSH CRADLE TO START. BE SURE YOU PUSH IT UP HIGH ENOUGH FOR THE MOTOR TO GET A GOOD START.

NOTE: Draping a small blanket over side of cradle will slow the swinging motion.


Using the Carrier

Lift carrier in and out of swing.

⚠ WARNING: Do not adjust the handle while carrier is on swing.

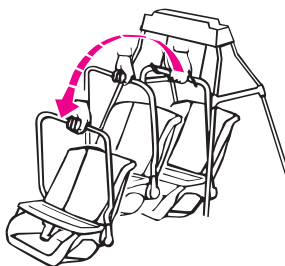

Different uses for infant carrier...

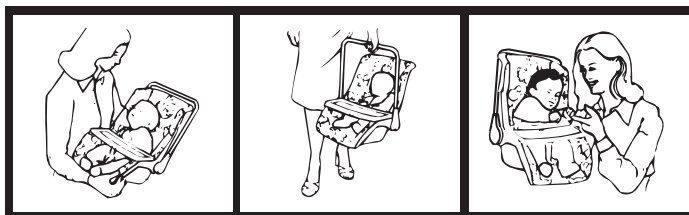


Cuddler

Carrier
...or as a Rocker.


Feeder

Adjusting the Handle

To bring carrier handle from resting position into position for carrying or swinging, first **set the carrier down**. Then push down on center of handle, and rotate the handle forward until it clicks into the locked position.

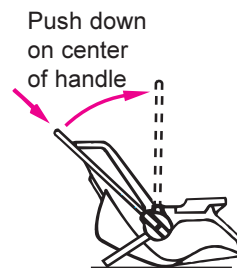


To return the handle to resting position, first **set the carrier down**. Then push down on center of handle, and rotate the handle backward until it clicks into place.

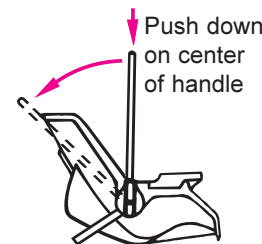

NOTE: It is normal for the handle to seem loose in the resting position.

Using the Tray

Unlatch the tray by squeezing the two latches under the tray at the same time, and lift up tray. **Be careful** not to let tray hit your baby when lifting or closing tray.

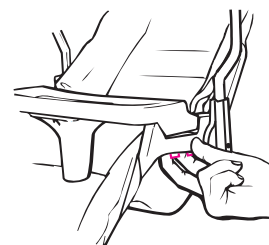


To latch tray, push down firmly. **Tray must be latched at all times when baby is in the swing.**

Adjusting the Stand

To change recline of the carrier, squeeze the adjustment wire and move to desired position.

To adjust for rocking, move the adjustment wire to the highest position.

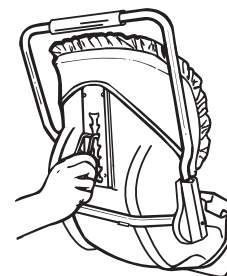


⚠ WARNING: Do not change recline with baby in carrier. Be aware that infant movement or rocking may cause the carrier to move on a table.

Starting the Swing

CHECK that all parts are securely fastened together before using the swing.


Step 1.

Place carrier in hanger. **Be sure handle notches are seated in the hanger.**

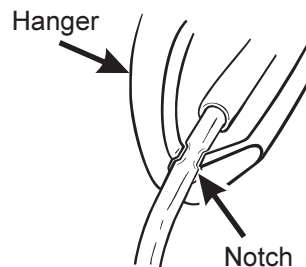


Step 2.

Open tray and waist belt. Belt buckle will be one of two styles:
Side release buckle—squeeze sides of buckle to release.

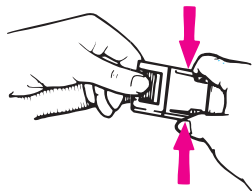

OR


Front release buckle—push in on front of buckle to release.

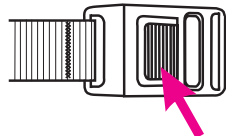

Step 3.

Thread belt through the buckle as shown.

CHECK that the belt is threaded correctly by pulling on the waist belt. **The belt should not slip through the buckle.**

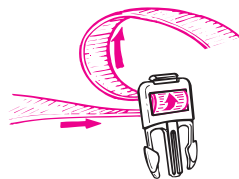

Side release buckle



Front release buckle

Step 4.


Place baby in the seat. (If your child is very small, you may want to prop with rolled-up blankets.)

Step 5.

Fasten the waist belt. Adjust belt as needed to get a snug fit around your child.




OR

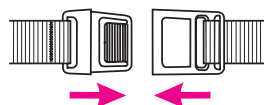

Step 6.


Close the tray. **CHECK that tray is latched.**

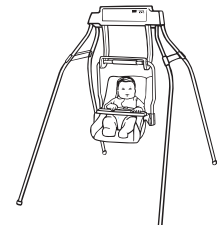

⚠ WARNING: Do not count on the tray or waist belt alone to hold your baby. Always secure your baby with both the waist belt and tray when your child is in the swing.


Step 7.

Center the CONTROL switch between “low” and “high”.

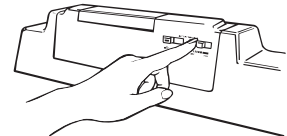

Step 8.

Push ON/OFF switch to the “on” position.

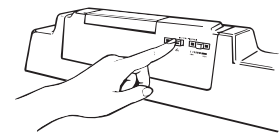

Step 9.

PUSH SWING SEAT TO START. BE SURE YOU PUSH IT UP HIGH ENOUGH FOR THE MOTOR TO GET A GOOD START.

Observe the swinging motion for a minute. It takes time for your swing to adjust to a new setting.

- For a lower speed, push the control switch toward “low.”
- For a higher speed, push the control switch toward “high.”

Indicator Light-
ON/OFF light comes on when swing is turned on.

NOTE: Seat may be stopped any time motor is running without damaging motor. To restart, push swing.

FOR SAFE BATTERY USE:


DO NOT REMOVE OR INSERT THE BATTERIES WITH BABY IN SWING. THE BATTERIES COULD FALL ON BABY IF DROPPED.

KEEP THE BATTERIES OUT OF CHILDREN'S REACH.

DO NOT ATTEMPT TO RECHARGE REGULAR OR ALKALINE BATTERIES. THEY MAY EXPLODE OR LEAK.

DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY BURST OR RELEASE HARMFUL SUBSTANCES.

REMOVE BATTERIES WHEN SWING WILL NOT BE USED FOR AN EXTENDED PERIOD OF TIME (THEY COULD LEAK AND DAMAGE THE MOTOR UNIT).

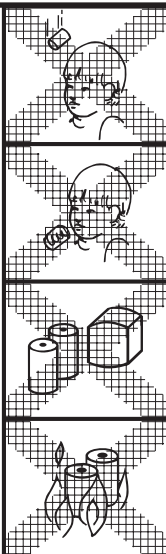

Caring for Your Battery Powered Swing

Problem:

Possible Reasons for Problem:

Swing won't operate

1. No batteries in swing.
2. Batteries dead.
3. Control setting too low.
4. Batteries in backwards—check "+" and "-".
5. Corrosion on battery terminals. Rotate the batteries in place against terminals, or clean with sandpaper or steel wool if corrosion is severe.
6. Baby leaning too far forward.
7. Baby grabbing swing legs. (Discontinue use.)
8. Seat not pushed high enough for good start.

Seat doesn't swing very high

1. Control setting too low.
2. Blanket hanging down, causing increased wind resistance.
3. Batteries too weak.
4. Baby leaning too far forward.
5. Baby too heavy or too active. (Discontinue use.)
6. Soft carpet (swings higher on hard floors).
7. Leg joints not tight. Push upper and lower legs firmly together and twist.

If you still have problems, call our toll-free number, 1-800-345-4109.

Swing Replacement Parts

Instructions for ordering swing parts:

Complete form below. Your swing model number **MUST** be included on the form to ensure proper replacement parts. Your model number can be found on a sticker beneath the swing motor. **Payment must accompany your order.**

Parts List:

Price:*

Motor unit	\$25.00
Infant carrier	\$30.00
Plastic hanger assembly	\$7.00
Cloth seat cover	\$17.00
Waist belt with buckle	\$7.00
Plastic leg brace	\$5.00 (each)
Upper leg section	\$7.00 (each)
Lower leg section	\$7.00 (each)
Leg tips (set of four)	\$5.00
Cradle	\$25.00

* Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions, please call toll-free:

1-800-345-4109

Hours 8 a.m.—10 p.m. Eastern time.

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS, INC.
CUSTOMER SERVICE DEPARTMENT
MAIN STREET
ELVERSON, PA 19520

Model Number

SHIP TO:

(Must be filled in)

Name

- ☐ Motor unit
☐ Infant carrier
☐ Plastic hanger assy.
☐ Cloth cover
☐ Waist belt with buckle
☐ Plastic leg brace
☐ Upper leg section
☐ Lower leg section
☐ Leg tips
☐ Cradle

Address

City, State, Zip

(_____) Telephone

☐ Check enclosed (payable to Graco Children's Products, Inc.)

☐ Charge to credit card:
☐ Visa
☐ MasterCard
☐ Discover

Total: _____

Account #:

6% sales tax

Expiration Date: _____

(PA only): _____

Total Amount

Signature: _____

Due: _____